



Mounting instructions AZ firewall insulation kit

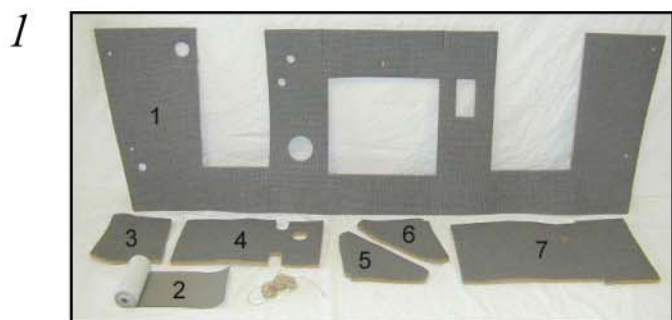


Following parts is available in this kit.

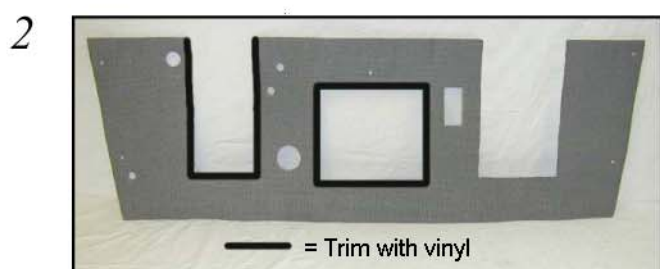

Trim the marked pieces on no.1 with the included vinyl. (no.2)



The cuts on no. 1 will be overlaped about 10mm and stiched together.

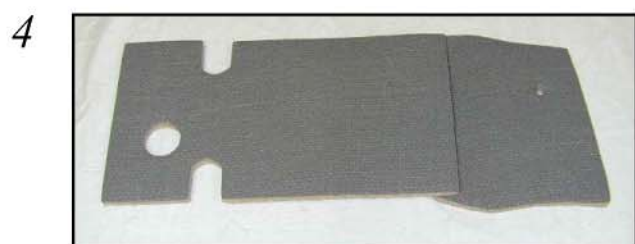

No. 3 and no. 4 will be overlaped about 10mm and stiched together.
Notice!! No. 4 have to be placed on top.



The kit with no. 3 and no. 4 will be stiched together in no.1's left pocket.
Fasten the kit at the pocket's very bottom, and at about 80mm on both sides at the top of the pocket.
Notice! No. 1 have to be placed on top.

6



Place no. 5, no. 6 and no.7 according to the picture.

7



No. 5 will be stiched together with no. 7. Overlap them about 10mm. Now do the same thing with no. 6. Notice! No. 7 have to be placed on top.

8



The kit with no. 5, no. 6 and no.7 will be stiched together in no.1's right pocket. Notice! No 1 have to be placed on top.

Your firewall insulation kit is now ready to fit your car!