



# Mounting instructions 1800 firewall insulation kit

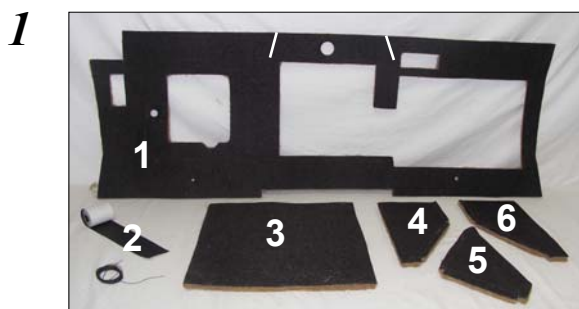

Following parts are available in this kit.

It is possible that you have to make two cuts (60-80mm) along the marked lines at the top of no. 1. to make the fitting better.

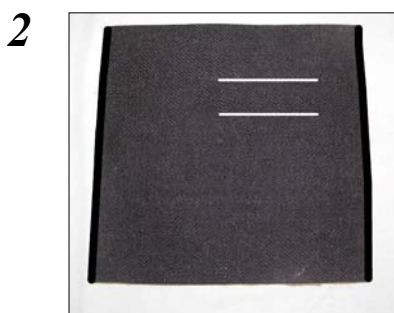

Trim the marked pieces on no. 3 with the included vinyl. (no. 2)

If you have a car with year-model 70-73 (car with electronic fuel injection) you also have to make two cuts along the marked lines according to the picture.



Place no. 3 och no. 5 according to the picture.




Nr.5 will be stiched together, to the right, with no .3. Overlap them aprox. 10mm.  
Notice! No. 3 have to be placed on top.



No. 3 and no. 5 will be stiched together with nr. 1 according to the picture. Overlap them aprox. 10mm.  
Notice! No. 1 have to be placed on top.

6

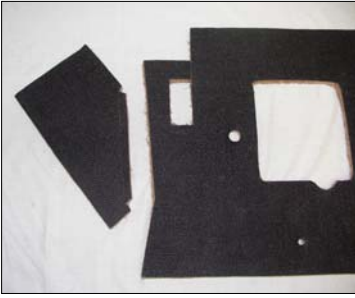

Place no. 4 to the left of no. 1 according to the picture.

7




No. 4 will be stiched together with no. 1. Overlap them aprox. 10mm.  
Notice! No. 1 have to be placed on top.

8




Place no. 6 to the right of no. 1 according to the picture.

9

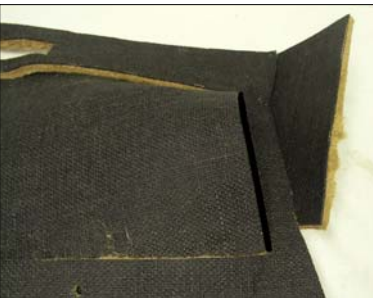

No. 6 will be stiched together with no. 1. Overlap them aprox. 10mm.  
Notice! No. 1 have to be placed on top.

10

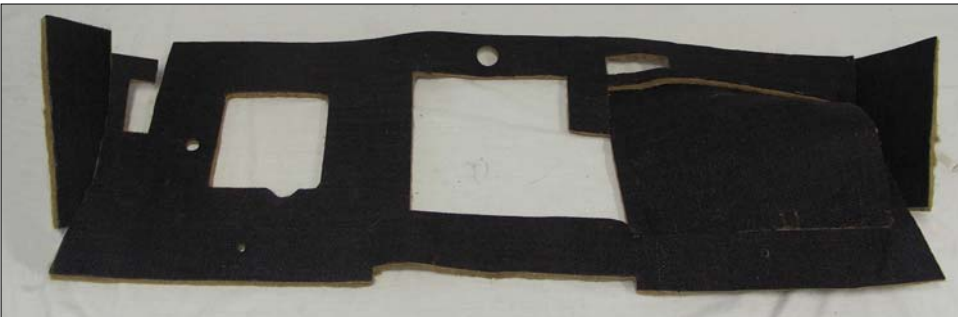

Your fire wall insulation kit is now ready to fit your car!